Example Wall Diagram
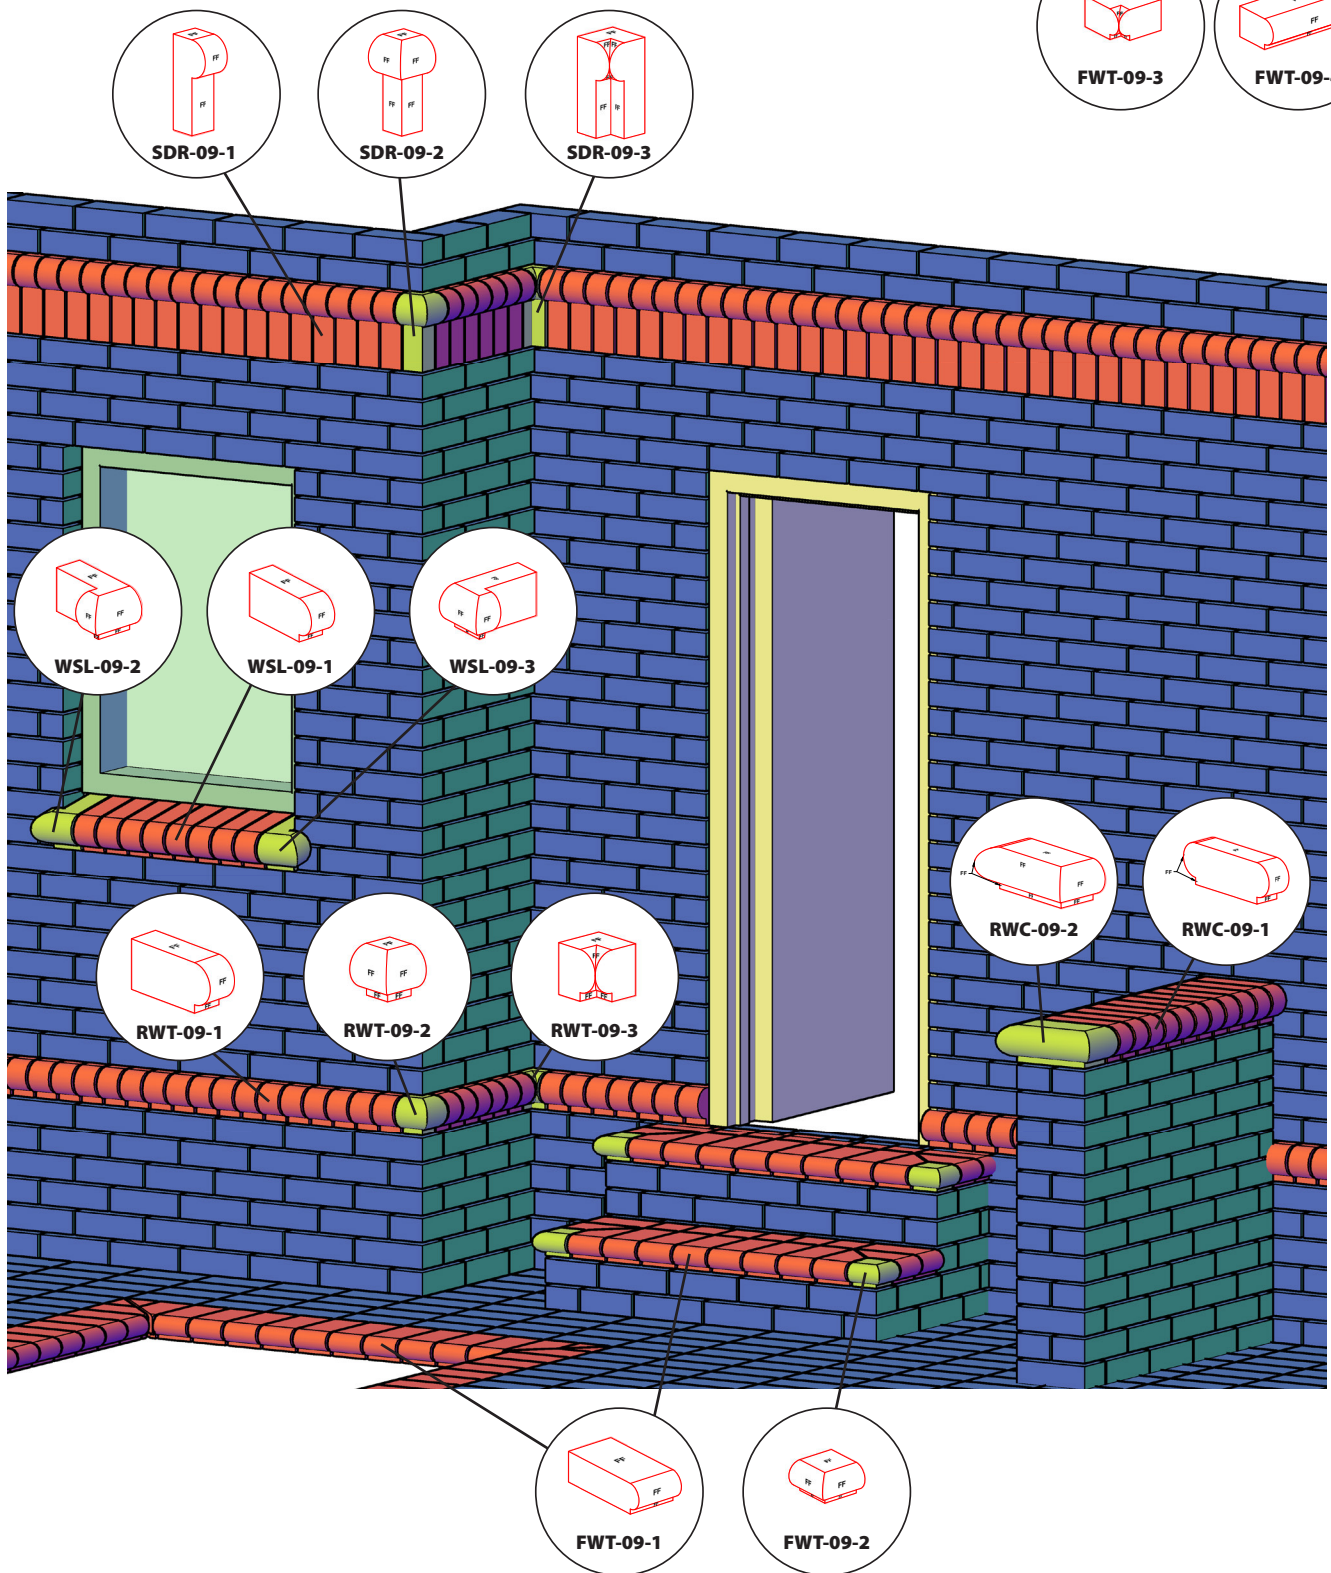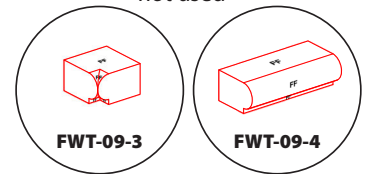
Same Profile

Here is an example of what it looks like when when you use a single profile across multiple shape types, in this case Profile **09 Full Bullnose**.

not used

FWT-09-3

FWT-09-4

SDR-09-1

SDR-09-2

SDR-09-3

WSL-09-2

WSL-09-1

WSL-09-3

RWC-09-2

RWC-09-1

RWT-09-1

RWT-09-2

RWT-09-3

FWT-09-1

FWT-09-2

Example Wall Diagram

Different Profiles

Here is an example of what it looks like when when you use multiple profiles and shapes, in this case Profiles:

01 Sloped   03 Cove   05 Bullnose Ogee   07 Crown Ogee   08 Bullnose Flat   10 Coping

SDR-03-1   SDR-03-2   SDR-03-3

WSL-05-2   WSL-05-1   WSL-05-3

RWC-08-1   RWC-08-2

FWT-01-1   FWT-01-2   FWT-01-3

FWT-07-1   FWT-10-1   FWT-10-2